

Paragraph	Page	Paragraph	Page
4-68. Negligible Damage	40	4-75. Damage Repairable By Insertion	42
4-69. Damage Repairable By Patching . . . . .	40	4-76. Damage Necessitating Replacement . . . . .	42
4-70. Damage Repairable By Insertion	40		
		4-77. COCKPIT ENCLOSURE	42
4-71. FUSELAGE LONGERONS . . . . .	40	4-78. Description . . . . .	42
4-72. Description	40	4-79. Negligible Damage	42
4-73. Negligible Damage . . . . .	40	4-80. Damage Repairable By Patching . . . . .	42
4-74. Damage Repairable By Patching	40		

## SECTION V

## ALIGNING GEAR

5-1. GENERAL . . . . .	43	5-10. Re-Installation Of Housing	43
5-2. Description	43	5-11. Main Landing Gear Trunnion Repair . . . . .	43
		5-12. Damage Necessitating Replacement Of Parts . . . . .	47
5-3. MAIN LANDING GEAR . . . . .	43		
5-4. Description	43	5-13. NOSE LANDING GEAR	47
5-5. Negligible Damage . . . . .	43	5-14. Description . . . . .	47
5-6. Repairable Damage	43	5-15. Repairable Damage	47
5-7. Axle - Strut Housing Containing Cracks	43	5-16. Damage Necessitating Replacement Parts	47
5-8. Removal of Housing	43		
5-9. Rework of Housing . . . . .	43		

## SECTION VI

## ENGINE SECTION

6-1. ENGINE MOUNT . . . . .	49	6-22. Description	51
6-2. Description	49	6-23. Negligible Damage . . . . .	51
6-3. Access For Repair . . . . .	49	6-24. Damage Repairable By Patching	51
		6-25. Damage Necessitating Replacement . . . . .	51
6-4. SKIN	49		
6-5. Description . . . . .	49	6-26. NOSE COWL	51
6-6. Negligible Damage	49	6-27. Description . . . . .	51
6-7. Damage Repairable By Patching . . . . .	49	6-28. Negligible Damage	51
6-8. Damage Repairable By Insertion	49	6-29. Damage Repairable By Patching . . . . .	51
6-9. LONGERONS . . . . .	49	6-30. HINGED COWL	51
6-10. Description	49	6-31. Description . . . . .	51
6-11. Negligible Damage . . . . .	49	6-32. Negligible Damage	51
6-12. Damage Repairable By Patching	49	6-33. Damage Repairable By Patching . . . . .	53
6-13. Damage Repairable By Insertion . . . . .	49		
6-14. Damage Necessitating Replacement	49	6-34. ENGINE AFT MOUNT FITTINGS	53
		6-35. Description . . . . .	53
6-15. BULKHEAD AT STATION 40.5 . . . . .	49	6-36. Negligible Damage	53
6-16. Description	49	6-37. Damage Necessitating Replacement . . . . .	53
6-17. Web Negligible Damage . . . . .	49		
6-18. Web Damage Repairable By Patching	51	6-38. ENGINE MOUNT TO FUSELAGE ATTACHMENT FITTINGS . . . . .	53
6-19. Flange Negligible Damage . . . . .	51	6-39. Description	53
6-20. Flange Damage Repairable By Patching	51	6-40. Negligible Damage . . . . .	53
		6-41. Damage Necessitating Replacement	53
6-21. ENGINE MOUNT CROSS TUBE . . . . .	51		

## SECTION VII

## FABRIC REPAIR AND ATTACHMENT . . . . . 54